## Guard VMS + Alarm settings

- 1. VMS Server Cargisplayer Setup.
- 1.1 Select Settings / Video-upload config



1.2 Click you want receives alarm type.

Client					
File Windows C	ontrol Settings He	elp			
					_
					Online:1/1 TEST001 (ABC)
NO V	IDEO	NO VIDEO NO VIDEO			
ΝΟ V				×	
	🔽 ALARM	VLOSS	RELAY	V TPMS	
	📝 G-Sensor	📝 Car Speed	🗹 Time adjust	📝 Over heat	
	V Record error	📝 HD error	🔽 SD error	📝 Fan error	
NO V		Ok	Cancel		
	IDEO	NO VIC	DEO		
buffering ◆			TEST001	2016-07-26 18:24:03	}
∢ ▶		• * **			

1.3 Access selected Car ID and Click Net Realtime Play on online list.

Server			
File Windows Control Settings Help			
🗁 🔍 🐟 😋 🕅 🖙			
		Online: 1/56 longitude:	121.492195,latitude:25.004932
		TEST001	The SIN
		631 Net Recorded Play	Scranton (
		ABI Uploaded File	The t
		TV Device Info Control	NINGH-RU TO
		ABI Delete from List	Wilkes-Barre
		ABC-2808	and the second states
		Amsterdam 052	A Coding
		(Demo G1)	Lot 1 mills
		(Demo G1)	阿倫敦(伊斯頓
		Amsterdam_054	Allentown
		Amsterdam_055	W T WARD
		(Demo G1) Amsterdam 055	Reading Princeton
		(Demo G1)	and with
		Amsterdam_057 (Demo G1)	its Contraction of the contracti
		Amsterdam_058	iter · · · · · · · · · · · · · · · · · · ·
		(Demo G1) Amsterdam 060	
		(Demo G1)	① 威爾明頓 Cherry Hill +
		(Demo G1)	
		APPLE - 008	le amoust auto solois coogle manter ditte areas
eady			
	( <u> </u> ←		
	- 8 8	Gx : 0.00	
		Gy : 0.00	
2 6 1		Gz : 0.00	
		Speed 1 might 150	
0 milo/h 3 1 4		100	
		Temp:0 tc 100	
			1 1 1

1.4 Alarm had been triggered: Alarm Icon had become Red.



- 2. GuardVMS + Setup.
- 2.1 \* Access VMS server.



2.2 Select Settings/ Alarm.



## 2.3 Enable<u>Alarm</u> Item



## 2.4. Alarm had been triggered:

本地 設?	主 地圖			
				Ū
	GuardsVMS got Al			
	Live Stream	Þ		
	Play	Exit		
		(F)	<u>+</u>	Ð
	Googlein	太急関 地圖資料	©2016 Google, ZENRIN 使用條款	