
## Push Alarm Notification Operational Procedure

1. Enable Network Push Alarm: Menu→Setup→Network→Notification→Push Alarm.

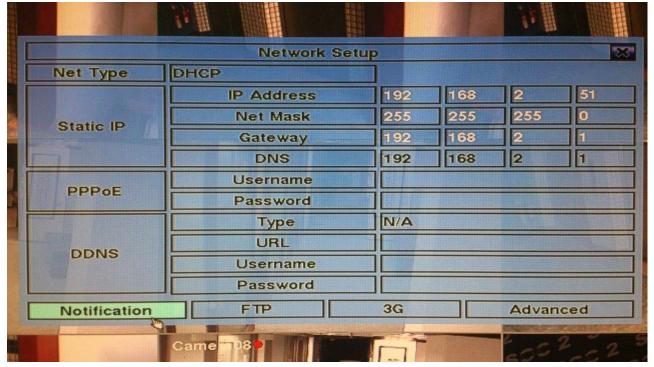


	Notification Setup	<b>建筑的</b> 的机道的成本的"空空"	15.34
E-mail-			
SMTP Server	msa.hinet.net		
SMTP Port	25		
Authentication			
Username			
Password			
Mail From			
Mail To #1			
Mail To #2			
Mail To #3			
Mail To #4			
Mail To #5			
Attachment	N/A		
Push Alarm		1	


2. Enable Notification for the individual Alarm Input: Menu→Setup→Alarm Setup→Notification.

Alarm Setup					
Alarm In	1	2	3	4	
Normal State	Open	Open	Open	Open	
Title	AI01	AI02	AI03	AI04	
Focus Camera	1	2	3	4	
Duration	10 Sec.	10 Sec.	10 Sec.	10 Sec.	
Goto Preset	N/A	N/A	N/A	N/A	
Pre-record	5 Sec.	5 Sec.	5 Sec.	5 Sec.	
Post-record	10 Sec.	10 Sec.	10 Sec.	10 Sec.	
Alarm Out	N/A	N/A	N/A	N/A	
Buzzer	1				
Log	1				
Screen Message					
Notification	10				
FTP		-	-	-	
Came 18					

3. Find Settings in your mobile phone  $\rightarrow$  GuardCMS  $\rightarrow$  Enable Notifications

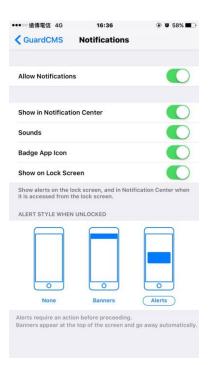

4. Run GuardCMS app, enable the remote app's Notification in Alarm I/O.

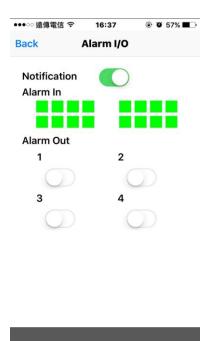

5. Make sure mobile phone & DVR both connect internet. Push alarm notification as below.

