


QIG : MDVR NETWORK SETTING (RJ45)


* Before user setup and execute network function by Ethernet(RJ45),
Please follow the parameters of VMS server to set account as below :

1.GROUP ACCOUNT 2.PASSWORD 3.SERVER ADDRESS

(1) Enter MENU → select **SYSTEM** → **PERIPHERAL** → **NETWORK**

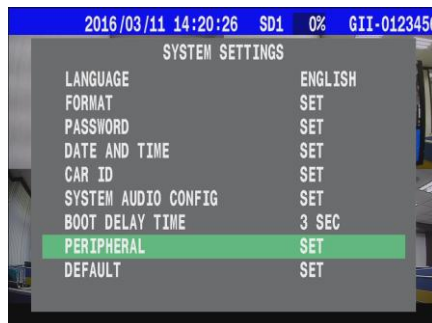

1. * GROUP ACCOUNT : ABC
2. * PASSWORD : 12345678
3. * SERVER ADDRESS :
59.120.137.202

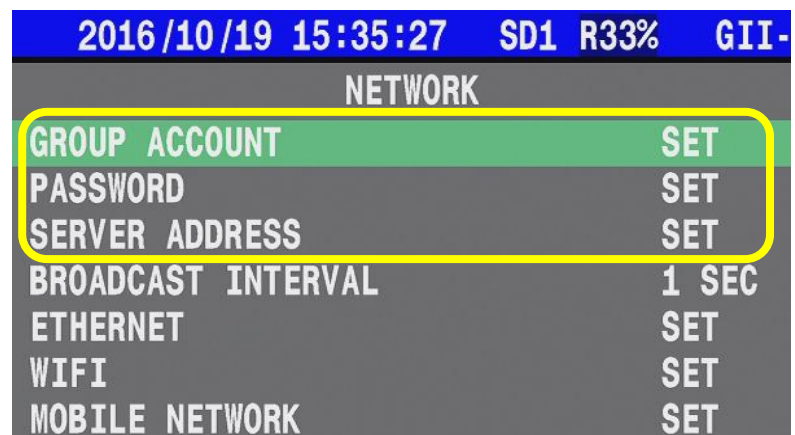


(Refer the Appendix)



- Connect with switch via RJ45 cable.

(2) Press  on remote control to select "**ETHERNET**"

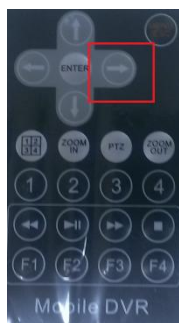


2016/10/19 15:35:24 SD1 R33% GII		
NETWORK		
GROUP ACCOUNT		SET
PASSWORD		SET
SERVER ADDRESS		SET
BROADCAST INTERVAL		1 SEC
ETHERNET		SET
WIFI		SET
MOBILE NETWORK		SET


(3) Chooses type to **AUTOMATIC** then system would get IP address from DHCP server.

2016/10/19 15:35:34 SD1 R33% GII-0123	
NETWORK	
ETHERNET	
ETHERNET	ON
IP OBTAINING	AUTOMATIC
IP ADDRESS	192.168.101.159
SUBNET MASK	255.255. 0. 0
GATEWAY	192.168.100.254
DNS 1	8. 8. 8. 8
MAC	00:1B:CC:00:66:4F
ROUTER	0. 0. 0. 0

(4) Back to main screen then reboot the MDVR.

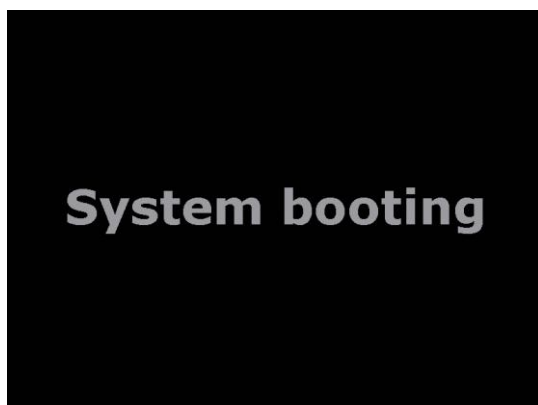

(5) After MDVR boot up, system will display the sign "RJ45" and "IP address" on main screen.

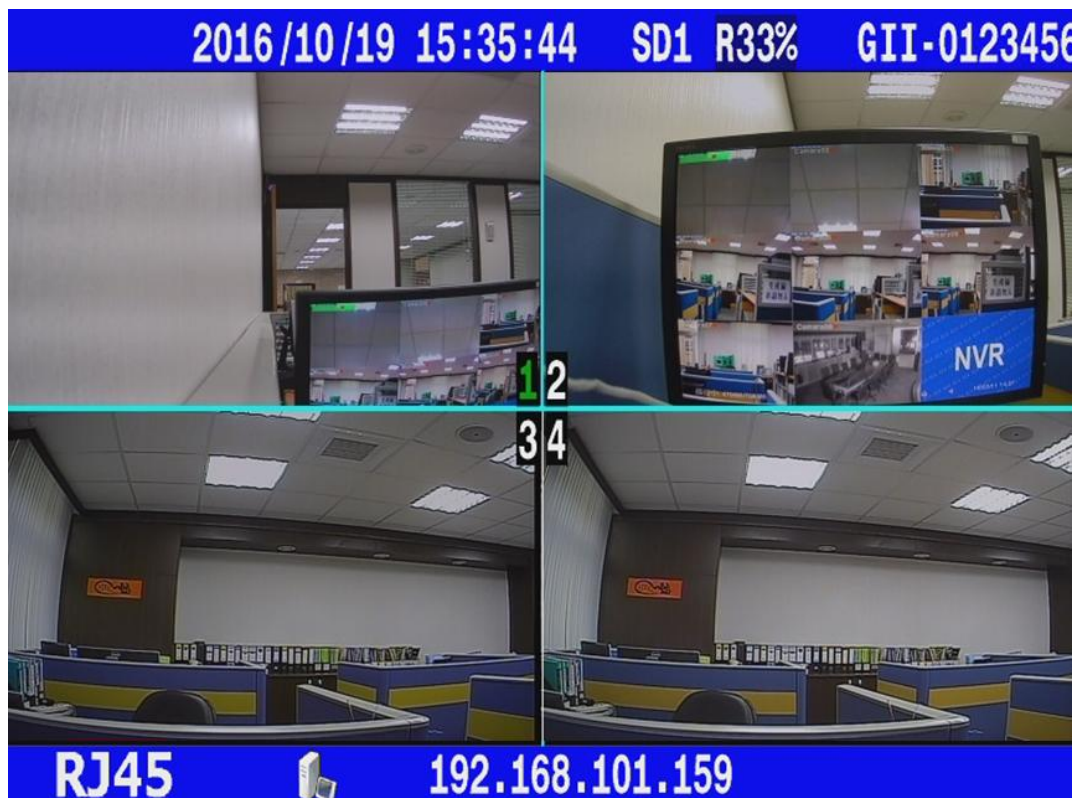

● Appendix :

Boot up **Cargisplayer** application then refer the parameters with User Account

* Please check "VMS - Server Mode" → "User Account" for above information.

