QIG : MDVR SETTING (3G/4G)

MOBILE NETWORK :

(1) Please put in 3G/4G Sim Card.



(2) Enter MENU \rightarrow select **<u>SYSTEM</u>** \rightarrow <u>**PERIPHERAL**</u> \rightarrow <u>**NETWORK**</u>

2016/03/1	1 14:20:18	0% GII-0123	2016/03/11 14:20:26	0% GII-0123	2016/03/11	14:20:35	0% GII-0123
			SYSTEM SETTIN Language Format	GS ENGLISH SET		G-	
PLAYBACK	DISPLAY	CAMERA	PASSWORD DATE AND TIME CAR ID	SET SET SET	PTZ	G-SENSOR	TPMS
			SYSTEM AUDIO CONFIG BOOT DELAY TIME	SET 3 SEC			1
ALARM	RECORD	SYSTEM	DEFAULT	SET	CAR SPEED	GPS	NETWORK

(3) Press $\ensuremath{{\rm J}}$ on remote control to select " **MOBILE NETWORK** "

1234
5 6 7 8
F1 F2 F3 F4

2016/03/11 14:25:38	1%	GII-0
NETWORK		
GROUP ACCOUNT		SET
PASSWORD		SET
SERVER ADDRESS		SET
ETHERNET		SET
WIFI		SET
MOBILE NETWORK		SET

(4) Please select **MOBILE NETWORK** \rightarrow set the detail parameters depend on your country.

2016/06/20 11:45:08		2%	ABC-3604
NET	WORK		
MOBILE	NETWORK		
MOBILE NETWORK		ON	
APN	IN	TERNET	
DIAL NUMBER USER PASSWORD	*99	9#	
PIN			

- (5) Setting <u>GROUP ACCOUNT</u> that synchronize with AP: user account (Refer <u>Appendix</u>).
- (6) Reboot the MDVR.



(7) You will see the sign "3G" , "CAR ID" and "IP adress" on screen.



• APPENDIX –

(1) Set "ACCOUNT" & "PASSWORD"	2016/10/19 15:35:27	R33% G	iII-	
	NETWORK			
	GROUP ACCOUNT	SET		
1. * GROUP ACCOUNT: <u>ABC</u>	PASSWORD	SET		
2. * PASSWORD : <u>12345678</u>	SERVER ADDRESS	SET		
3. * SERVER ADDRESS : <u>59.120.137.202</u>	BROADCAST INTERVAL	1 SE	EC	
	ETHERNET	SET		
	WIFI	SET		
	MOBILE NETWORK	SET		



* Please check "VMS - Server Mode" \rightarrow "User Account" for above information.

